



**AASTRA**

# 9110 USER GUIDE



# Table of Contents

<b>Introduction .....</b>	<b>2</b>
Emergency service Feature .....	2
Unpacking your phone .....	2
Key Descriptions .....	3
<b>Basic Installation.....</b>	<b>5</b>
<b>Making and Answering Calls .....</b>	<b>8</b>
Making a call .....	8
Answering a Call .....	8
Using the Hold Key.....	8
Making a Handsfree call.....	8
Muting a Handsfree call .....	9
Using the Redial .....	9
Adjusting the Handset and Speaker volume .....	9
Adjusting the Ringer volume .....	9
Set Indicator light .....	9
<b>Memory keys .....</b>	<b>10</b>
Saving numbers into memory keys .....	10
Labeling the memory keys .....	10
Making calls from memory keys .....	11
Deleting memory keys.....	11
Saving features in memory keys .....	11
Using features keys.....	12
Using the Dataport .....	12
<b>Troubleshooting .....</b>	<b>12</b>

## Introduction

**Congratulations....** on the purchase of your 9110 telephone.

This guide contains operating information for your 9110.

The 9110 is an advanced single-line telephone, that offers the following features:

- Handsfree (speakerphone) with mute capabilities
- 7 speed dial positions for frequently called numbers or feature access codes
- Last number redial
- Loop powered

 


### Emergency Service Feature


The Model 9110 will continue to provide basic telephone service during a power failure.

### Unpacking your phone

Along with this user guide, the following items are included with your telephone.

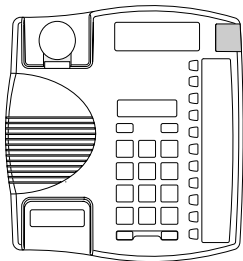

Telephone

 

Memory key card  
and plastic lens



 
Handset



Handset cord



Number card  
and plastic lens



Telephone stand

 




 



 

Telephone line cord

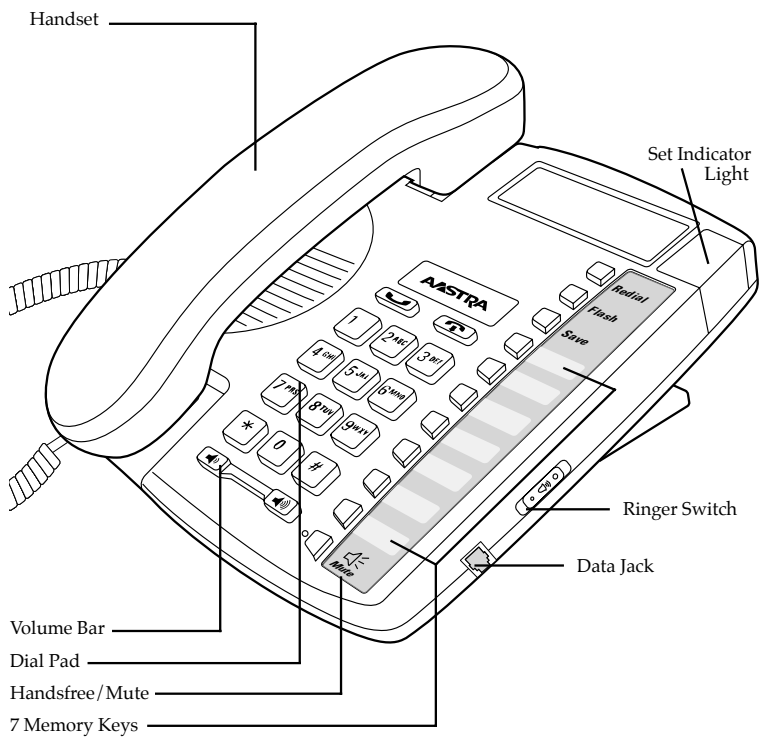

Regulatory sheet


# Key Descriptions



 
Keys	Key Description
Set Indicator Light	Flashes when the telephone rings, or when a call is on hold; lights up when a message is waiting. See <b>Set indicator light</b> on page 9 for more information.
7 Programmable Keys	Stores a number or feature for easy access.
	Ends an active call. It will not hang up a call that is on hold.
	Places calls on or off hold. See <b>Using the Hold Key</b> on page 8 for more information.
	Sets the handset and speaker volume while on call.
 <i>Mute</i>	Activates the speaker and microphone so you can listen and talk without using the handset; also mutes the microphone so that your caller cannot hear you (the light indicator will flash when the microphone is muted).
 <i>Flash</i>	Use with network features such as Call Waiting and Three Way Calling (flash is also referred to as link).
 <i>Redial</i>	Dials the last number dialed out on the telephone. See <b>Using Redial</b> on page 9 for more information.
 <i>Save</i>	Use to store numbers in memory keys.
	Memory keys store numbers. See <b>Memory keys</b> on page 10.

## Basic Installation


### 1. Connect the Handset Cord


Attach one end of the coiled handset cord to the handset and the other end to the handset port  on the back of the telephone.

Route the handset cord along the groove leading off the side of the telephone as shown in the illustration.

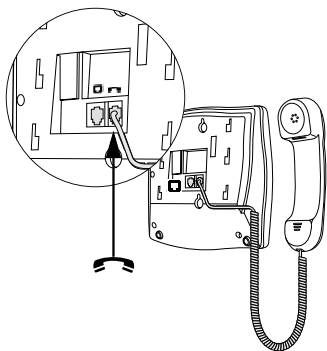

### 2. Connect the Line Cord

 Plug one end of the telephone cord into  on the back of the telephone and the other end to the phone jack.


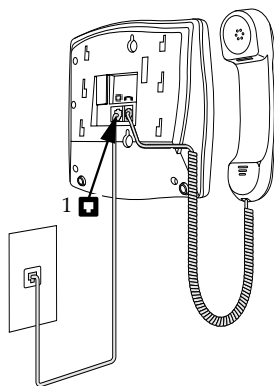


### 3. Attach the Stand for Desk Use

If you plan to mount the telephone on the wall, you do not need to attach the stand.

Lower the stand as shown below into the slots on the back of the telephone.

  
Slide the stand in the direction shown below until it clicks into the locked position.

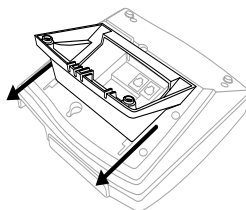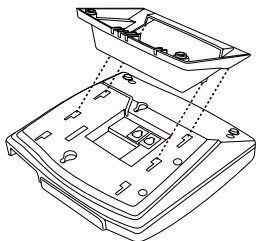

---


#### 4. Attach the line cord to the telephone stand

 Route the line cord along the groove on the telephone stand as shown in the illustration.

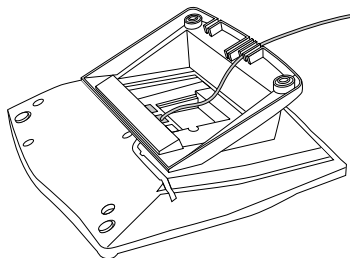

#### 5. Wall mounting installation

 It is recommended that you use a wall-mounting plate which is available through your telephone company or a local retailer. You will find it easier to wall-mount the telephone if you purchase a short telephone cord and use it in place of the long telephone cord.

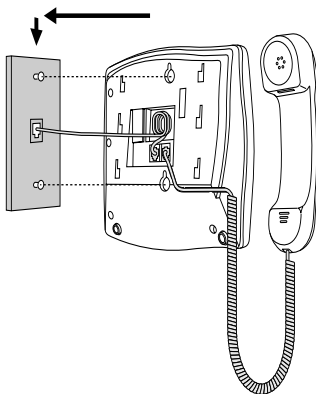

Coil the telephone cord into the space provided on the back of the telephone.

Line up the keys on the wall mounting plate with the key holes on the back of the telephone.

Place the telephone onto the wall mounting plate, and then push down to secure the telephone into place.

---

#### 6. Wall mounting installation with stand

 
The telephone can be wall mounted at an angle (tipped back slightly) by using the stand. Screw the stand to the wall using the two round holes in the stand (wedge part down, holes up). Connect line cord to the telephone. Attach the telephone stand.

### 7. Insert the number card on your telephone

Write your telephone number on the number card.

Place the number card into the slot underneath the handset cradle on the telephone.

Gently bend the clear plastic lens and place it on top of the number card in the slot.

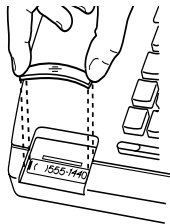


### 8. Insert the Memory key card on your telephone

This card contains the feature names for the dedicated keys and label identification spaces for the seven programmable memory keys.

Place the card into the memory key card slot on the telephone.

Gently bend the clear plastic lens and place it on top of the memory key card in the slot.

 For information on programming memory keys, refer to **Memory keys** on page 10

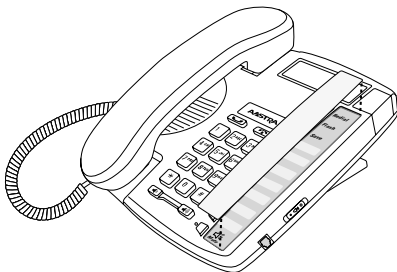


Avoid potential electrical shock hazard and damage to the telephone, by using the manufacturer-supplied parts. Specifically, only use a two conductor modular line cord.

Substitution of non-approved parts will void the Aastra Telecom Inc., warranty. If you have a question about your installation or safety concerns, please call 1-800-574-1611 to speak with our representative.




## Making and Answering Calls

### Making a call


With your telephone you can make and answer calls using your handset or  for speakerphone capabilities.

#### To make a regular call:

1. Lift the handset or press .
2. Enter the number using the dial pad.



 
### Answering a Call

#### To answer a call:

1. Lift the handset or press .

### Using the Hold Key

#### To put a call on hold and take a call off hold:



1. Make or answer a call.
2. Press . The set indicator light will flash quickly to indicate there is a call on hold.
3. To retrieve the call, press  or . If you don't retrieve the call within 15 minutes, the call is automatically dropped.

**Note:** The 9110 automatically releases a call on hold when a person on an extension telephone on the same line picks up the call. If you don't hang up the handset after you have put a call on hold and that call is picked up by someone at another extension, the call is taken off hold but remains connected to your telephone. If this happens, any background noise from your area will be heard by the caller and the person at the other extension.



### Making a Handsfree call

 
You don't have to use the handset to use your telephone. Instead, you can use Handsfree mode to place a call, or you can switch to Handsfree mode while a call is in progress.

#### To dial without picking up the handset:

1. Press .
2. Dial a number using the dial pad.
3. When the call is over, press .

#### To switch to a Handsfree call:


1. Lift the handset.
2. Dial a number using the dial pad.
3. To switch to handsfree, press .
4. Hang up the handset.
5. When the call is over, press .

**Note:** After ending a handsfree call, you may find you must wait for at least 2 seconds prior to pressing  to obtain dial tone and initiating your next call. This time is required to allow the network to completely disconnect your last call.

## Muting a handsfree call

You can turn off the microphone so that the caller can't hear you but you can still hear the caller. Muting a call only works when you are in Handsfree mode.


### To mute a handsfree call:

1. Press /Mute.



---

2. Without lifting the handset, make a call.


---

3. To turn off the microphone, press /Mute. You can hear your caller but your caller cannot hear you. The light next to the key will flash to indicate the mute is on.

---

4. To speak to your caller, press /Mute again. Each time you press /Mute, you turn the microphone on or off.


---

5. When the call is over, press .


## Using Redial

Pressing Redial dials the last number dialed.

 
### To make a call using Redial:

1. Lift the handset or press /Mute.

---

2. Press /Redial.

## Adjusting the Handset and Speaker volume

Press the left or right side of the volume bar  to adjust the volume on the handset or speaker. The handset volume resets to factory set volume level after each call. The speaker volume remains at the level selected until the next time you change it.

## Adjusting the Ringer Volume

The ringer volume is controlled by a three position switch on the side of the Model 9110. The ringer volume can be set to low, medium, or high.

## Set Indicator Light

The set indicator light, located on the top right hand corner of the Model 9110, flashes and illuminates to provide information as follows:


Set indicator light flashes very quickly.	Incoming call.
Set indicator light flashes quickly. (2 pulse/sec.)	Line is on HOLD.
Set indicator light flashes slowly. (1 pulse/sec.)	Message Waiting*.

## Memory keys


### Saving numbers into memory keys

You can save up to 7 speed dial numbers of your customers, business associates, or anyone you call frequently in 9110's seven memory keys.

#### To save a telephone number in a memory key:

1. Lift the handset or press /Mute (the dial tone signal will continue while you save).



---

2. Press  Save. You will hear a two tones.


---

3. Press the desired memory key you wish to store the number to. You will hear one tone.


---

4. Use the dialpad to enter the number. You can enter any number up to 30 digits. If you need to enter a 2 second pause (between your voice mail number and a password, for example) press the  key. To program a number or code that uses Flash, press the  Flash key.

---

5. Press  Save to save the number into the memory key. You will hear two tones.

 
---

6. Hang up the handset or press .

**Note:** In some operating environments, these steps must be completed within 20 seconds or the line will briefly disconnect. The telephone will not store digits to memory if this occurs and you will have to repeat the steps above to save to a memory key.

### Labeling the memory keys

Your Memory key card has label identification spaces (shaded in grey) for each of the seven programmable memory keys. Write the name of the autodialer or feature on these spaces when you program a memory key.

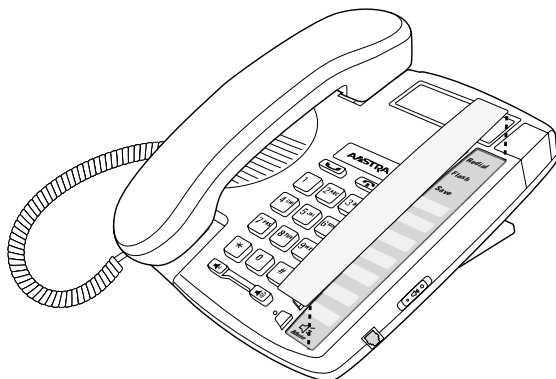

## Making calls from memory keys

### To call from a memory key:

1. Lift the handset or press (the dial tone signal will continue).
2. Press the memory key to obtain the number you wish to dial.

## Deleting memory keys

### To delete a memory key:

1. Lift the handset or press (the dial tone signal will continue while you delete).
2. Press . You will hear two tones.
3. Press the desired memory key you wish to delete. You will hear a different tone sound.
4. Press . You will hear two tones.
5. Hang up the handset or press .

## Saving features in memory keys

For easy access, you can save the feature codes of telephone company services in your memory keys. This works well with network features such as Call Forwarding and Call Return. Some features require an On and Off code in two separate keys, while other features are stored on only one key. The following procedures show you how to save both an On and Off code.

### To save a Feature On code:

1. Lift the handset or press (the dial tone signal will continue while you save).
2. Press . You will hear two tones.
3. Press the desired memory key you wish to store the feature code to. You will hear one tone.
4. Enter the telephone company feature code for turning the feature on.<sup>†</sup>
5. Press to save the feature code into the memory key. You will hear two tones.
6. Hang up the handset or press .
7. Label the memory key.

### To save a Feature Off code:

1. Lift the handset or press (the dial tone signal will continue while you save).
2. Press . You will hear two tones.
3. Press the desired memory key you wish to store the feature code to. You will hear one tone.
4. Enter the telephone company feature code for turning the feature off.<sup>†</sup>
5. Press to save the feature code into the memory key. You will hear two tones.
6. Hang up the handset or press .
7. Label the memory key.

**Note:** In some operating environments, these steps must be completed within 20 seconds or the line will briefly disconnect. The telephone will not store digits to memory if this occurs and you will have to repeat the steps above to save to a memory key.

<sup>†</sup>Contact your telephone company for the appropriate feature codes. Some may require subscription to Custom Calling Features.

## Using feature keys

When a memory key is programmed with a feature code, you can use the memory key to activate or deactivate the feature.

### To turn a feature on or off:

1. Press the memory key where you stored the desired feature.
2. Lift the handset or press  *\*Mute*. The feature code is dialed out, which turns the feature on or off.

## Using the Dataport

Located on the right hand side of the Model 9110, the dataport can be used to connect another device such as a fax machine or computer modem to the phone. Plug one end of the line cord to the phone and the other end to the device to be connected.

The dataport can only be used when the phone is not in use.

## Troubleshooting

*The telephone wobbles.*

Check that the handset cord is placed in the channel between the stand and the telephone. See the illustration on page 6.

*I cannot program a memory key.*

Some of the memory keys may be factory-programmed. These keys are locked and cannot be erased or reprogrammed.

*How do I answer Call Waiting?*

To answer a Call Waiting call, press  *Flash*. You may have to subscribe to a Call Waiting<sup>†</sup> service to use this feature.

*I do not hear dial tone.*

Check that the line cord and receiver cord are securely plugged into the proper jack and are not damaged.

*I hear dial tone or a recorded message when I am saving a number into a memory key.*

This is normal. Since the 9110 is programmed off hook, a dial tone will continue while you save or erase numbers or codes in memory keys. You may even hear beeps or a recording. These sounds do not interfere with programming.

In some operating environments, these steps must be completed within 20 seconds or the line will briefly disconnect. The telephone will not store digits to memory if this occurs and you will have to repeat the steps to save to a memory key.

*I can't get dial tone using the handsfree speakerphone after hanging up from a previous call.*

In some operating environments, you must wait for at least two seconds after ending a call before initiating your next call.

<sup>†</sup>This service may have a different name in your area — contact your telephone company for details.

**C**

- Calling
  - from a memory key 11
  - from the Redial List 9

## Calls

- handsfree 8
- holding 8
- muting 9

**D**

- Deleting
  - memory keys 11
- Directory 10

**H**

- Handsfree 8
- Helpful hints
  - see Troubleshooting 12
- Hold 8

**I**

- Installation 5

**K**

- Key descriptions 3

**M**

- Memory keys 10
  - cannot program 12
  - deleting 11
  - editing 11
  - making calls from 11
  - saving features 11
- Mute 9

**R**

- Redial
  - List 9

**S**

- Save key 4
- Saving
  - feature codes to memory keys 11
  - numbers to memory keys 10

**T**

- Troubleshooting 12

**V**

- Volume
  - muting a handsfree call 9

**GENERAL INQUIRIES**

If you have read the guide and you still have questions, call 1-800-574-1611 in Canada and the USA.  
In other areas, contact your telephone company.