

Quick Look Chart

Technology Enhanced Classrooms

| *Intended Purpose | Extron Video Switch Setting | NEC Projector Remote Setting |
|--|--|---|
| Turn ON the Room Projector | Depends upon what you want projected to the large screen at the front of the room. | Point the NEC Projector Remote at the ceiling mounted projector infrared sensor and press and hold ON then release |
| Turn OFF the Room Projector | Extron Switch 1 - This is usually labeled Tower Computer | Point the NEC Projector Remote at the ceiling mounted projector infrared sensor then press and hold OFF , press OFF again to confirm. |
| Podium "Tower" Computer Display the main Instructor Screen located inside the Podium to the large screen at front of room. | Extron Switch 1 - This is usually labeled Tower Computer Sound volume is controlled via the Computer/Laptop or the DVD/VCR volume control knob of the sound amplifier located inside the Podium. | Computer 1 (labeled RGB on older NEC Remotes) |
| Laptop | Extron Switch 2 - This is usually labeled Laptop Computer | Computer 1 (labeled RGB on older NEC Remotes) |
| Document Camera | Extron Switch 3 or 4 - This is usually labeled Document Camera | Computer 1 (labeled RGB on older NEC Remotes) |
| MP3 Player / Mobile Phone (audio only) | Extron Switch 2 - This is usually labeled Laptop Computer. | Not Applicable. |
| DVD/VCR Player | Extron Switch 1 - This is usually labeled Tower Computer | VIDEO * Please change NEC Projector Remote back to the Computer 1 Source when finished for the next instructor using the room. |
| ITC Miracast Wireless VGA Video Checkout Kit | Extron Switch 2 - This is usually labeled Laptop Computer | Computer 1 (labeled RGB on older NEC Remotes) |

* Common settings for EIU Technology Enhanced Classroom (TEC) Equipment
 More information is available at the ITC Website under the TEC Classrooms Section
<http://eiu.edu/itc> Last updated: 2/2/2016 -tg

To report a problem with Technology Enhanced Classrooms call the EIU Help Desk at (217) 581-4357.