

Denon DN-700R Recording Instructions

NOTE: USE A BLANK USB DRIVE OR SD CARD AS FILES ON THE DRIVE COULD BE WIPE! 2GB MINIMUM FLASH DRIVE OR YOU MAY NOT HAVE ENOUGH SPACE!

STEP 1: Plug in your flash drive or SD card into the top usb slot (DRIVE) or leftmost SD card slot (SD1).

STEP 2: Perform a **SPEED CHECK** under **MENU**—> **UTILITY** —> **SPEED CHECK**—> (USB or SD1), to see if your drive is formatted correctly for recording.

(Use Jog wheel on right to scroll through and click to select. Press **MENU** to go back a page if you select the wrong item.)

If the speed check is successful skip to **STEP 4**.

STEP 3: ~~~ **CAUTION, THIS IS THE PROCESS THAT ERASES YOUR DRIVE!**~~~~

If your drive is not formatted correctly, select **FORMAT MEDIA**, under **MENU**—> **UTILITY**—> **FORMAT MEDIA**—> (USB or SD1)


Return to **STEP 2**, if this does not work, your flash drive is too old to use with the recorder, I recommend purchasing a USB 3.0 flash drive.

STEP 4: Press the **RECORD** button. This brings you into **LEVEL MONITOR MODE**. Set recording levels with the jog wheel. Press **RECORD** again to start recording.

STEP 5: Press **STOP** to end recording or press **RECORD** to make a new track and continue recording.

Speed Check
Checks the read and write speed of the currently used media (SD). Always perform a speed check on media before using it.

- 1 Select "UTILITY" and rotate the jog dial to select "Speed Check", then press **ENTER**.
The media list is displayed.

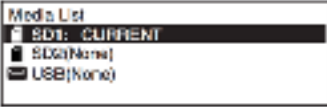

Media List
SD1: CURRENT
SD2:(None)
USB:(None)

- 2 Rotate the jog dial to select the media, and press **ENTER**.
- 3 Select "OK" with the jog dial, and press **ENTER**.
Media check starts and "Check Speed..." is displayed.

*The following results are displayed when the speed check is complete.
"Good": The checked media is suitable for use.
"Good w/No Pwr Warn": The checked media is suitable for simple recording but is unsuitable for recording from long.
"Poor": The checked media is unsuitable for use.

- 4 Select "OK" and press **ENTER**.

Recording

- 1 Press **REC**.
The unit switches to the recording paused state, and the **REC** button flashes and **PAUSE** button light. The display switches to the recording display.
- 2 Adjust the recording level and recording balance.
- 3 Press **REC**.
Recording starts.



Recording display showing: REC 0001.0001, REC LEVEL 0.0%, 00:00:00, MM 10/26/61, DT 05/13/2013 11:44PM, ST R:\05132013134019_DN-700R.wav, A:

File name
The file name of the file in which recording is stored is composed of the machine name, recording start time and user area date. The file creation formats can be selected in "00 File Name Form" in "System Setting". The file name can be inputted when "04 User Area" in "System Setting" is "On".
(After recording has started, the recording start time in the file name continues to proceed until the recording start time is confirmed.)

- 4 Press **STOP**.
Recording stops, and **REC** turns off.